


Quick Start Guide for FlexCart16 (16-bay) Configurations

FlexCart16 w/ BatteryBay Charging System

FlexCart16 w/ PowerStation Charging System

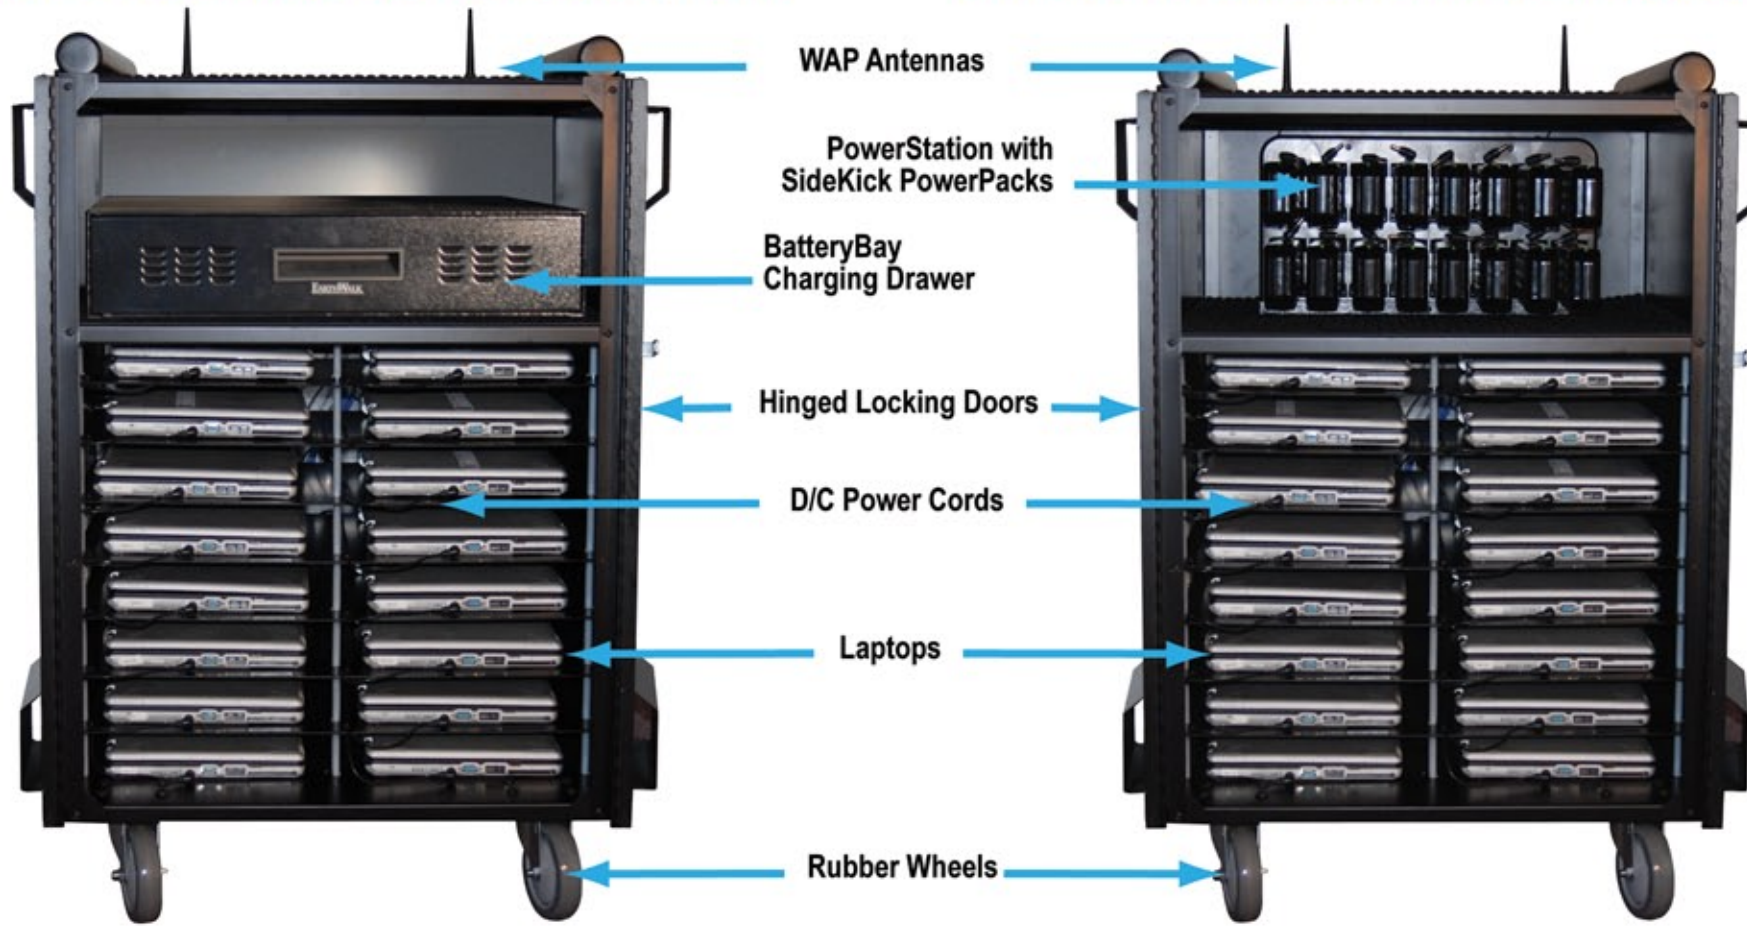

FlexCart16 - REAR VIEW



- Auxiliary Electrical Outlet
- Three (3) Ethernet Uplink Auxiliary Ports
- On/Off Power Switch
- FlexCart Power Cord



USB Ports



VGA Port

Audio Out

eBUDDY Laptops configurations vary by model



Let's Get Started:

- Make sure the power switch located on the back panel of the FlexCart is in the OFF position. Insert the power cord into an electrical outlet. Connect your network cable into the FlexCart Ethernet Uplink port.
- Remove bubble wrap from Access Point antennas and place upright on top of the FlexCart. Reconfiguring the Access Point is not necessary unless your facility has a dedicated, wireless infrastructure. Refer to the WAP configuration instructions located on the Technical Support section of our website.
- Carefully insert the laptops into each slot and insert the D/C power cord plug for each laptop. Batteries should be installed in the laptop prior to recharging. SideKick PowerPacks should be placed into the PowerStation charging unit for charging prior to use.
- Turn on the FlexCart, the instructor's laptop (or desktop PC) and any peripherals to check that all are recognized and computer content can be displayed.

OPTIONAL STEPS (if applicable):

- Connect the VGA port from the instructor's laptop (or desktop PC) to the PC/TV monitor or digital projector using the VGA cable provided with the display device. (Connection locations may vary.)
- Locate the audio output on the instructor's laptop (or desktop PC) and connect to the appropriate PC audio inputs located on the PC/TV monitor or digital projector.
- To install a wireless keyboard, connect the Infrared Detector's USB cable to any one of the open USB ports located on the instructor's laptop (or desktop PC). Attach the Infrared Detector on the top of the PC/TV monitor or where you will have a clear line of sight when using the remote wireless keyboard. Please contact EW Technical Support (EWSupport@EarthWalk.com) for further instructions regarding driver installation.

SideKick PowerPacks

1. Insert the SideKick PowerPack into the PowerStation charging unit and within 5 minutes a "BLINKING GREEN" LED will indicate the unit is "ON" and that the SideKick PowerPacks are charging.
 2. When the SideKick LED turns a "SOLID GREEN," this indicates that it is now fully charged. (NOTE: For optimal performance and extended battery life, charge the SideKick overnight. Batteries are fully charged after 12-14 hours.)
 3. When fully charged, plug the SideKick PowerPack into your laptop as you would the power(brick) adapter.
- A "SOLID GREEN" LED (with NO blinking) indicates that your SideKick has **full to half** power capacity.
 - A "BLINKING GREEN" LED that **STEADILY** blinks on and off at 1-second intervals indicates the SideKick is at **half to low power** capacity.
 - A "BLINKING GREEN" LED that **RAPIDLY** blinks on and off at 1/2-second intervals indicates that the SideKick is at **low or nearly depleted power** capacity. You should immediately "Save Your Work," power down your laptop, and place the SideKick back in the PowerStation charging unit for recharging.