


Quick Start Guide for FlexCart24 (24-bay) Configurations

FlexCart24 w/ BatteryBay Charging System

FlexCart24 w/ PowerStation Charging System

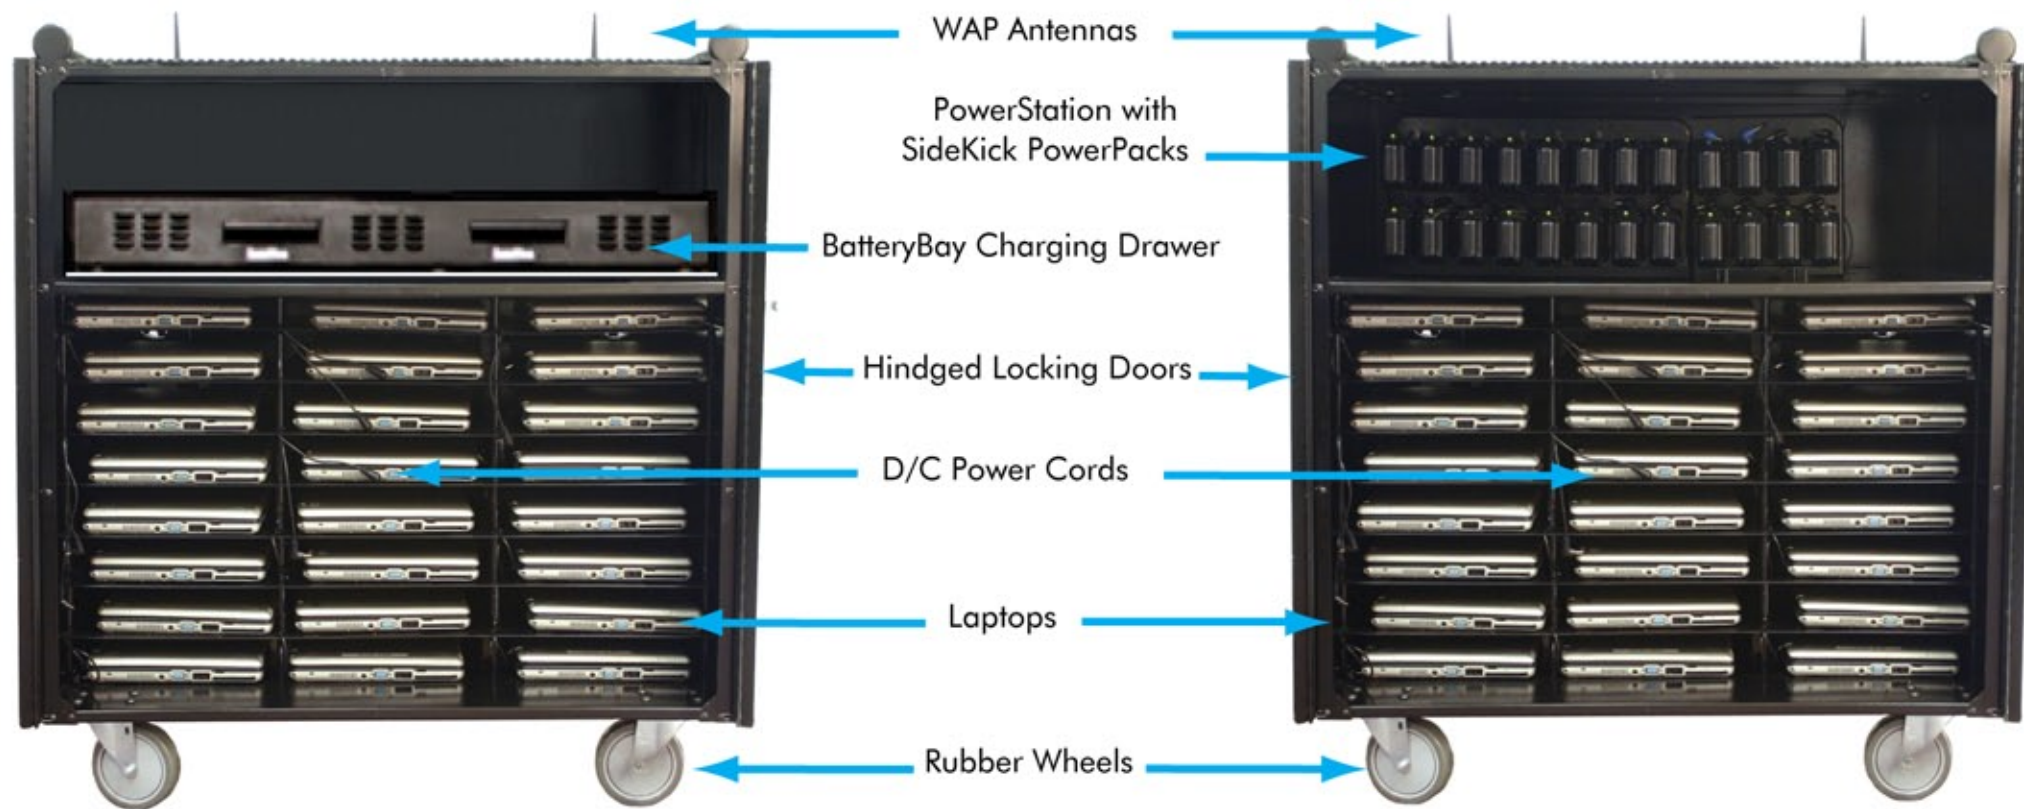

FlexCart24 - REAR VIEW



- SmartCart Power Cord
- Auxiliary Electrical Outlet
- Three (3) Ethernet Uplink Auxiliary Ports
- On/Off Power Switch



USB Ports

eBUDDY Laptops configurations vary by model



VGA Port

Audio Out

SIDEKICK POWERPACKS



Let's Get Started:

- Make sure the power switch located on the back panel of the FlexCart is in the OFF position. Insert the power cord into an electrical outlet. Connect your network cable into the FlexCart Ethernet Uplink.
- Remove bubble wrap from Access Point antennas and place upright on top of the SmartCart. Reconfiguring the Access Points is not necessary unless your facility has a dedicated wireless infrastructure. Refer to the configuration instructions located on the Technical Support section of our Website.
- Carefully insert the laptops into each slot and plug in the power cord for each laptop. Batteries should be installed in the laptop prior to recharging. SideKick PowerPacks should be placed into the Power Station for charging prior to use.
- Turn on the FlexCart, the instructor's laptop (or desktop PC) and any peripherals to check that all are recognized and computer content can be displayed.

OPTIONAL STEPS (if applicable):

- Connect the VGA port from the instructor's laptop (or desktop PC) to the PC/TV monitor or Digital projector using the VGA cable provided with the display device. Connection locations vary.
- Locate the audio output on the instructor's laptop (or desktop PC) and connect to the appropriate PC audio inputs located on the PC/TV monitor or Digital projector.
- To install a wireless keyboard, connect the Infrared Detector's USB cable to any one of the open USB ports located on the instructor's eBuddy (or desktop PC). Attach the Infrared Detector on top of the PC/TV monitor or where you will have a clear line of sight when using the remote wireless keyboard. Please contact EW Technical Support (EWSupport@EarthWalk.com for further instructions regarding driver installation.

SideKick PowerPacks

- Insert the SideKick PowerPack into the PowerStation eCharger and within 5 minutes a "Blinking Green" LED will indicate the eCharger is "On" and that the SideKick is charging.
 - When the SideKick LED turns a "SOLID GREEN," this indicates that it is now fully charged. NOTE: For optimal performance and extended battery life, charge overnight. Batteries are fully charged after 12-14 hours.
 - When fully charged, plug the SideKick into your laptop as you would your power adapter.
- A "SOLID GREEN" LED (with no blinking) indicates that your SideKick has full to half power capacity.
 - A "Blinking GREEN" LED that STEADILY blinks on and off at 1-second intervals indicates your SideKick is at half to low power capacity.
 - A "Blinking GREEN" LED that RAPIDLY blinks on and off at 1/2-second intervals indicates that your SideKick is at low or nearly depleted power capacity. Save your work, power down your laptop, and place the SideKick back in the PowerStation for re-charging.



10511 Battleview Parkway Manassas, VA 20109
703-393-1940 Toll Free (US) 888-213-4900
www.EarthWalk.com ewsupport@earthwalk.com